







How-To

Loading & Adjusting Spring Hinges


Functional Area: Jobsite

Work Center: Install Site

Posting Date: 6/12/2014

Author: Mike Beyerl

Spring hinges are applied to entry doors in the same manner as standard hinges. Spring hinges do not get any tension applied to them until after the installation of the entry door system is complete at which time the installer is to adjust the tension to his liking.

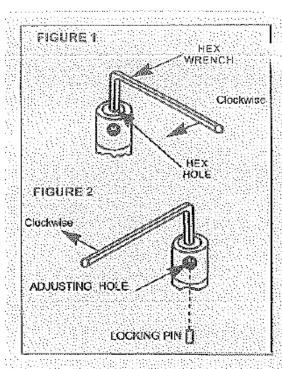

Installation Instructions

CAUTION #1: Door should be in a closed position.

CAUTION#2: Do not adjust tension past (3) holes when a 180 degree opening is required. Do not adjust tension past (4) holes when a 90 degree opening is required.

CAUTION #3: Use proper safety protection while installing the Hager Spring Hings.

CAUTION 44: 0n 3 1/2" x 3 1/2" 1150/1250 Series — Maintain Mortise Depth at ... 119"

CAUTION #5: Do not force.

- Install spring hinge in normal manner and oriented for right hand or left hand door.
- Place door in closed position.
- Insert Hex Wrench in Hex Hole (Figure #1)
- Rotate Hex Wrench clock wise(while viewing from the adjustment end of hinge) to increase tension (figure#2), and insert locking pin loosely in adjusting hole.

1750 SERIES

	SZE	RECOMMENDED MAX. DOOR WEIGHT (LES.)	BEARING HINGE	SPRING HINGE LOCATION	1
	3 1/2 x 3 1/2	45	2	T CENTER	
:	4 x 4	70	\$10.15%;	2 CENTER/BOTTOM	
:		90	:: :::::::::::::::::::::::::::::::::::	3 ALL	

1150/1250 SERIES

	SIZE	RECOMMENDED MAX. DOOR WEIGHT (LES.)	BEARING HINCE	SPRING HINGS LOCATION
	3 1/2 x 3 1/2 4 x 4	60	2	1 CENTER
ı		83		2 CENTER/BOTTOM
I		\$200 () 110 () ()	<u>,,,,,,,,</u>	3 ALE
	4 1/2 x 4	70	2	1 CENTER
	4 1/2 × 4 1/2	principle (15 0-1-17)	444) (444)	2 CENTER/COTTOM
		150	Yalaat - taa	3 ALL: Granting

- 5) Release Hex Wrench until locking pin contacts side of adjusting hole.
- 6) Remove Hex Wrench and check the door closing force.
- 7) If closing force is not satisfactory, repeat steps 2 thru 6

Form Revised Date: 6/10/2014 Page 1 of 1 Revised by: MS