

Z-Series Articulating Cap Sill – Field Instruction – Cap Cover Removal

This instruction describes how to remove the Z-Series Articulating Cap Sill cap cover on an installed door unit.

Step 1 – Lift Exterior Edge of Cap Cover

Approach door unit from interior side.

Starting at one end, lift exterior edge of cap cover upward and towards interior.



Continue to lift and separate exterior edge along length of sill.



Step 2 – Disengage Interior Edge of Cap Cover

Starting at one end pull cap cover upward to fully disengage cover from the sill. Continue along entire length of sill until cap is fully separated from the sill.

