

INSTALLATION OF CASEMENT SCREEN



New Casement Screen
No Clips




Spring loaded bottom corners



Insert screen, spring loaded at the bottom by operator.




Top of screen should be flexing toward the interior.

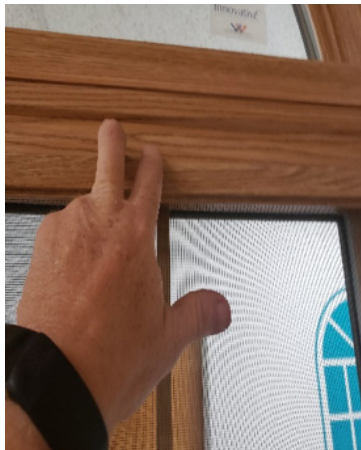

Push downward on the top of the screen, to compress the spring corner to snap in place.

To remove screen, follow these steps in reverse.

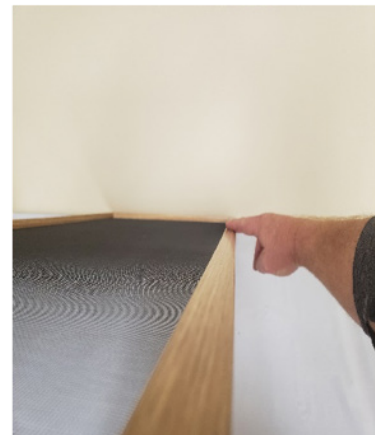

If the center of the screen does not sit flush to the frame, remove the screen, hold it at an angle facing downward and apply downward pressure along the edge of the frame. Move from bottom to top to create a slight inward bow to the frame.